

Distribuitor
Sunnysoft sro
Kovanecka 2390/1a
190 00 Praga 9
Republica Cehă
www.sunnysoft.cz

Ghid de aplicare

Acest produs este echipat cu funcție de hotspot WIFI, poate realiza conexiunea dintre gazdă și telefonul mobil fără a utiliza traficul mobil.

Pasul 1: Descărcați aplicația de pe piața de aplicații mobile (vezi codul QR pentru Android și Apple).

Pasul 2: Accesați ecranul de setări și comutați comutatorul WIFI (sau apăsați lung tasta de comandă rapidă pentru setări de pe ecranul de previzualizare video pentru a intra în modul WIFI).

Pasul 3: Porniți funcția WIFI a telefonului mobil și căutați numele WIFI cu LNDUXXX pentru a vă conecta. Parola este „12345678”. Pasul 4: Deschideți aplicația mobilă și realizați interacțiunea minunată dintre gazdă și telefonul mobil.

Butoane și funcții


butoane	Apăsare scurtă	Apăsare lungă
Comutator	Când apăsați scurt la modul ecran negru, modul ecran negru scurt în funcție de iluminare gazdă	Modul de pornire la modul de închidere, modul de închidere la modul de pornire
Menu/Mod	Fără comutator de stare video (interfață de cameră în timp real puternică, interfață rapidă de cameră în timp real apăsați lung pentru a seta panoul de taste - setări gazdă) starea comutatorului video al interfeței este invalidă	Apăsati lung tasta de setări de pe interfața camerei pentru a reda rapid setările în timp real a interfeței de gazdă) starea comutatorului video a interfeței este invalidă. Deschideți WIFI pentru a putea fi căutat
Bine	După selectarea funcției timp, opțiunea va fi implementată Interfața OK/previzualizare în timp real oprește înregistrarea și începe înregistrarea	
SUS	Funcții de implementare a interfeței selectate	Apăsati lung pentru a intra în interfața de afișare a vitezei, o altă apăsare lungă pe interfața selectată realizează funcția de defilare în jos pentru a intra în interfața de curse și o altă apăsare lungă pentru a intra în modul imagine în timp real
Jos	Selectarea unei interfețe pentru a implementa funcția de defilare în jos	

Descărcați aplicația




Motorcycle Dash Cam (M600)

Instrucțiuni de operare

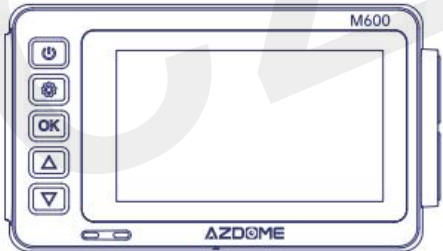

AZDOME


Instrucțiuni de produs

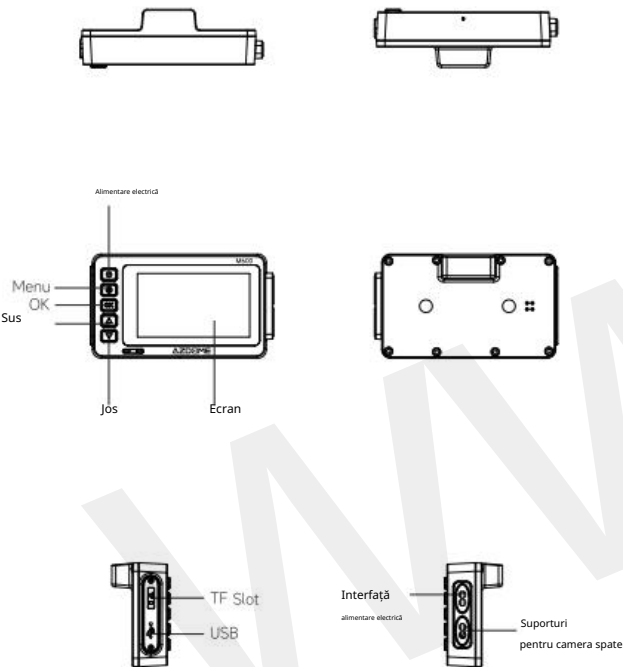

Specificatii

Nume	Specificații
Model	M600
Dimensiune	106,4 mm × 61,2 mm × 33,6 mm
Rezoluție video	1080P
Ecran	3.0
GPS	Modul dublu GPS/Beidou
Busolă	busolă GPS
Baterie	Baterie încorporată
Unghiul lentilei	121
Deschidere	F1.8
Format video	MP4
Format foto	JPG
Memorie	Card TF (suport max: 512 GB)
IMF	Sprijin
Senzor	Senzor de altitudine, precizie la altitudine mare
Voltaj	5V
TPMS	Opțional
Algoritmul BSD	Algoritm independent de cip
Temperatura de lucru	-10°C - 65°C

Conținutul pachetului

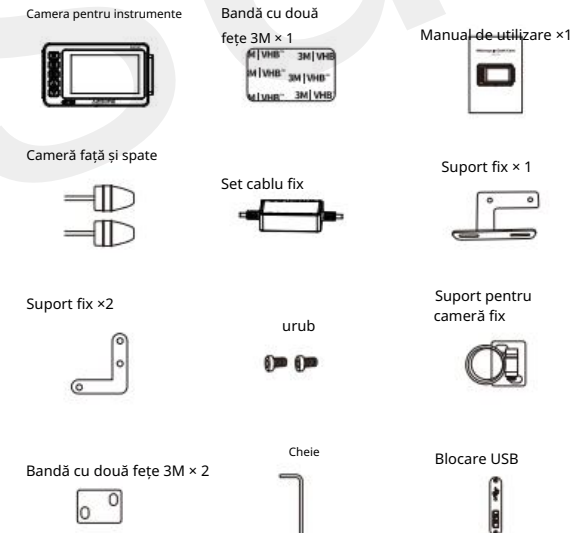


Sfaturi

- Acest produs aparține înregistratoarelor de conducere a motocicletelor, se poate adapta la diferite condiții extreme de copiere, dar evitați alcoolul, grăsimea și alte substanțe chimice pentru a evita deteriorarea structurii impermeabile.
- Acest produs acceptă IP67 rezistent la apă, dar evitați spălarea directă cu pistolul de apă de înaltă presiune.3. Înainte de a instala acest produs, opriți alimentarea motocicletei, găsiți cea mai bună poziție, fixați mașina și apoi porniți alimentarea ACC a motocicletei.
- Acest produs folosește un mod de stocare ciclic de înregistrare. Dacă există fișiere importante stocate pe acesta, vă rugăm să curățați în mod regulat videoclipul de pe cardul TF.

Instrucțiuni de instalare




Conexiune

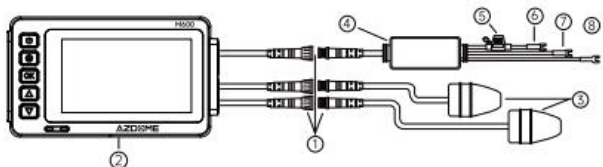


- Când conectați periferice, aliniați sloturile pentru carduri și închideți-le.
- M600 Guest.
- Camera frontală și spate (linia scurtă este camera frontală și linia lungă este camera spate)
- Pachet de putere
- Asigurați
- Cablul roșu este pentru conectarea la polul pozitiv al bateriei, tensiune constantă (9 - 40V)
- Cablul galben este pentru conectarea ACC (tensiune comutată, 9 - 40V)
- Negrul este polul negativ al sursei de alimentare

Descrierea interfeței de operare M600

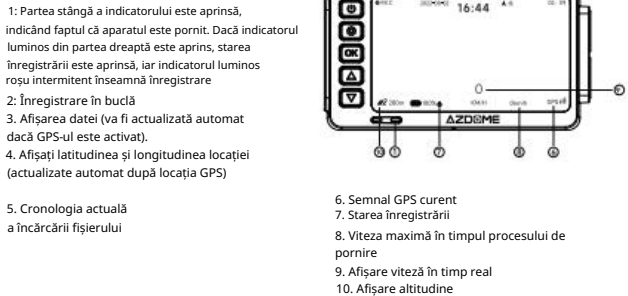

Interfață de curse

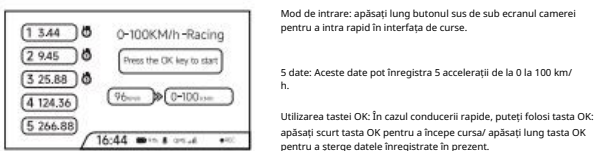

Mod de intrare: apăsați lung butonul sus de sub ecranul camerei pentru a intra rapid în interfața de curse.

5 date: Aceste date pot înregistra 5 accelerații de la 0 la 100 km/h.

Utilizarea tastei OK: În cazul conducerii rapide, puteți folosi tasta OK: apăsați scurt tasta OK pentru a începe cursa/ apăsați lung tasta OK pentru a șterge datele înregistrate în prezent.

Modulul 1 Informații introductive: Oferă date curente de viteză în timp real.

Modulul 2 Introducere: Oferă schimbarea generală de la începutul unei curse la evenimentul curent.

Independent Racing Interface



Mod de intrare: apăsați lung butonul de direcție în jos de pe spatele camerei pentru a intra rapid în interfața de viteză independentă.

Un cadran independent afișează viteza actuală a motocicletei.
1. Va furniza altitudinea GPS.
2. Asigurați viteza maximă atinsă în timpul călătoriei.
3. Furnizați datele busolei.
4. Furnizați latitudinea și longitudinea actuală a locației.

Depanare comună

- Recorderul nu pornește după încărcare
--Vă rugăm să verificați dacă motocicleta este pornită și dacă linia este conectată corect
- Cea mai mare parte a videoclipului este blocată în timpul utilizării
--Verificați dacă este setată cea mai scăzută setare posibilă de detectare a gravitației.
- Fișierul video nu este blocat.
--Verificați dacă setarea de detectare a gravitației este activată și, dacă este, setați sensibilitatea de detectare a gravitației la un nivel mai ridicat.
- Crash - Apăsați butonul de resetare de pe spatele corpului pentru a reporni forțat reportofonul.
- Nicio înregistrare după deschidere
--cardul TF formatat și reporniți reportofonul, verificați dacă interfața cablului camerei este slăbită.

AZDOME

Name: Motorcycle Dashcam
Company: Shenzhen Lingdu Automotive Electronic Technology Co., LTD
Address: 28-29 / F, Unit 1, Building 1, 1211 Guangang Road, Longhua District, Shenzhen
Service tel: 400-013-0518
Website: www.azdome.com

Manufacturer: Dongguan Lingdu ELECTRONIC Technology Co., LTD
Address: 1 Chenglong Street, Qingxi Town, Dongguan City, Guangdong Province, China
The enterprise has passed ISO9001 quality system certification

The picture on the package is for reference only, please refer to the actual product

APP Operation Guide

This product comes with WIFI hotspot function, can realize the interconnection between host and mobile phone without using mobile phone traffic

Step 1: Download the APP in the mobile app market (see the QR code for Android and Apple)

Step 2: Enter the setting screen and turn on the WIFI switch (or long press the setting shortcut key on the video preview screen to enter the WIFI mode)

Step 3: Turn on the WIFI function of the mobile phone and find the WIFI name with LNDUXXXX for connection. The password is "12345678".

Step 4: Open the mobile APP to realize the wonderful interaction between the host and the mobile phone.

Key and Function

Key and Function		
Button Image	Short Press	Long Press
	On a short press into black screen mode, short black screen mode according to light up the host	Boot mode into shutdown mode, shutdown mode into the boot mode
	No video state switch (real-time camera interface - powerful, fast real-time camera interface long press set key panel - host Settings) interface video switch state is invalid	Long press the setting key on the real-time camera interface to play quickly Panel - host Settings) interface video switch state is invalid. Open WIFI, that host WIFI can be searched
	After selecting the target function, the OK option/real-time preview interface will be implemented to stop recording and start recording	
	Selected interface implementation functions	Long press to enter the speed display interface, long press the selected interface again to realize the scroll down function to enter the racing interface, and long press again to enter the Image head real-time picture mode
	Select the interface to realize the down-scroll function	

APP download

IOS



Android



Notice

CE This product complies with the radio interface requirements of the European Community.

W This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.


FC Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Motorcycle Dash Cam (M600)

Manual

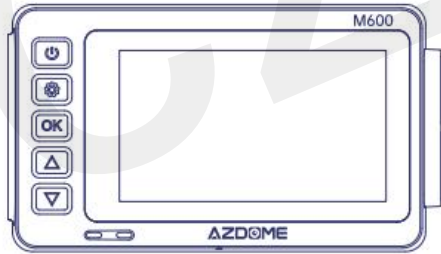

AZDOME

Product Instruction

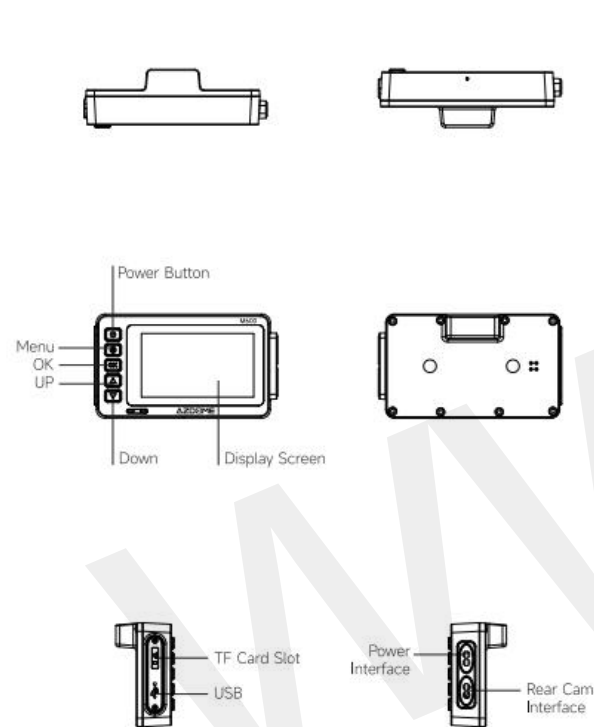


Production specification

Name	Specification
Model	M600
Size	106,4mm*61,2mm*33,6mm
Video Resolution	1080P
Screen	3.0
GPS	GPS/Beidou Dual Mode
Compass	GPS Compass
Battery	Build-in Battery
Lens Angle	121°
Aperture	F1.8
Vedio Format	MP4
Photo Format	JPG
Memory	TFcard(Max Support 512GB)
WIFI	Surpport
Sensor	Gravity sensor , High precision altitude
Voltage	5V
TPMS	Optional
The BSD algorithm	Chip independent algorithm
Working Temperature	-10°C~65°C

Packing List

Check the box for each of the following items before installing the dash cam.

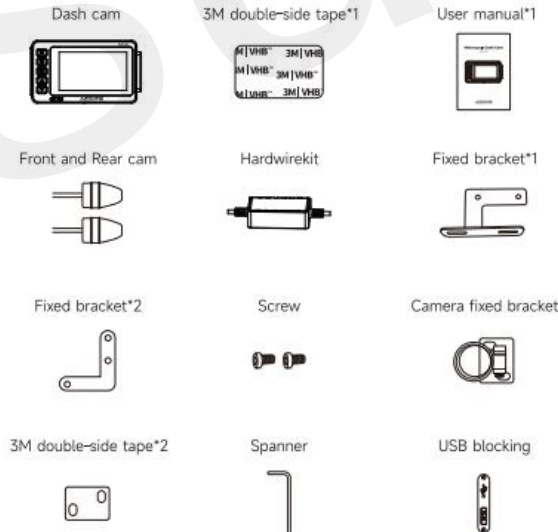


Product Tips

- This product belongs to the motorcycle driving recorder, can adapt to a variety of extreme copying environment, but please avoid alcohol, grease and other chemicals to avoid damaging the waterproof structure.
- This product supports IP67 waterproofing, but avoids direct washing by high pressure water gun.
- Before installing this product, turn off the motorcycle power supply, find the best position, fix the machine, and then turn on the ACC motorcycle power supply.
- This product adopts the storage mode of cyclic recording. If there are important files to save, please clean the TF card video regularly.

Installation Instructions




Wiring Instructions

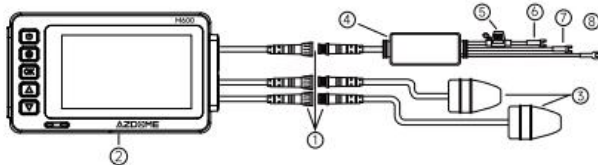


- Align the card slots and close them when connecting peripheral accessories
- M600 Host
- Front and rear cameras (The short line is the front camera, and the long line is the rear camera)
- Power Pack
- Fuse
- Red is ACC power supply positive
- Orange is the ACC power supply
- Black is the negative terminal of the power supply

M600 Interface Operation Description

- The left side of the indicator is on, indicating that the machine is powered on. If the light on the right is on, the recording status is enabled and the blinking red light is recording
- Loop recording
- Date display (Will be updated automatically when GPS is in place)
- Location latitude and longitude display (automatically updated after GPS positioning)
- Current recording file time progress
- The current GPS signal
- Recording Status
- The maximum speed during the startup process
- Real-time speed display
- Elevation display

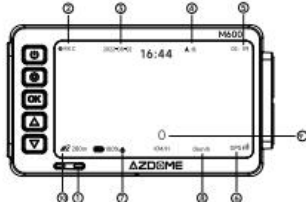

Racing Interface

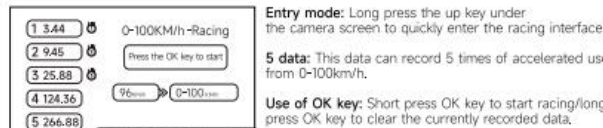


Entry mode: Long press the up key under the camera screen to quickly enter the racing interface.
5 data: This data can record 5 times of accelerated use from 0-100km/h.
Use of OK key: Short press OK key to start racing/long press OK key to clear the currently recorded data.

Module 1 Introduction: Provides current real-time speed data.

Module 2 Introduction: Provides the total displacement from the beginning of a single race to the current occurrence.

Independent Racing Interface

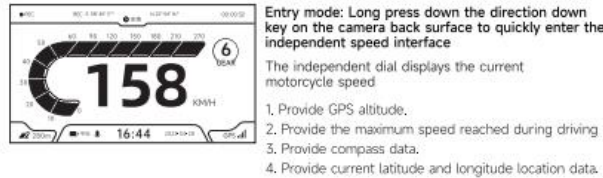

Entry mode: Long press down the direction down key on the camera back surface to quickly enter the independent speed interface

The independent dial displays the current motorcycle speed

- Provide GPS altitude.
- Provide the maximum speed reached during driving
- Provide compass data.
- Provide current latitude and longitude location data.

Common Troubleshooting

- The recorder is not turned on after loading
- Please check whether the motorcycle is powered on and the line is connected properly.
- Most of the video is locked during use
- Check that the gravity sensing Settings are set to the lowest possible setting.
- The video file is not locked
-Check that the gravity sensing setting is turned on, and if it is turned on, turn the gravity sensing sensitivity to a higher level.
- Crash
-Press the reset button on the back of the body to forcibly restart the recorder.
- No recording after open
- A formatted TF card and recorder restart, check whether the camera cable interface loose.